

IB-19B001

DELTA SERIES

JUNE 2003

**DELTA MOTOR**

&

**DELTA DRIVER**



## INSTRUCTION BOOK

INDUSTRIAL INDEXING SYSTEMS, Inc.

Revision - J  
Approved By:

Proprietary information of Industrial Indexing Systems, Inc. furnished for customer use only.  
No other uses are authorized without the prior written permission of  
Industrial Indexing Systems, Inc.

<b>Date</b>	<b>Rev.</b>	<b>ECN No.</b>	<b>DR</b>	<b>CHK</b>	<b>CHK</b>
9/3/03	0	ECN-03-392 (See Note 1)	KY	CD	
10/28/03	A	ECN-03-446 (See Note 2)	KY	CM	
03/25/04	B	ECN-04-033 (See Note 3)	KY	CD	
06/04/04	C	ECN-04-216 (See Note 4)	KY	ELS/MH	
11/24/04	D	ECN-03-267, 03-358, 03-462 ECN-04-137, 04-198, 04-220, 04-290, 04-404 (See Note 5)	KY	KY	
9/23/05	E	ECN-05-260 (See Note 6)	KY	KY	
3/9/06	F	ECN-06-007 (See Note 7)	KY	KY	
8/9/06	G	ECN-06-181 (See Note 8)	KY	KY	

**Notes:**

- 1) Appendix A, page A-4, dated September 2003, supersedes Appendix A, page A-4, dated June 2003.
- 2) Appendix B, page B-2, dated October 2003, supersedes Appendix B, page B-2, dated June 2003.
- 3) Section 5, page 5-9, dated March 2004, supersedes Section 5, page 5-9, dated June 2003.  
Section 8, page 8-3, dated March 2004, supersedes Section 8, page 8-3, dated June 2003.
- 4) Section 5, page 5-9, dated June 2004, supersedes Section 5, page 5-9, dated March 2004.  
Appendix B, pages B-4 and B-5, dated June 2004, supersedes Appendix B, pages B-4 and B-5,  
dated June 2003. C-329YYY supersedes C-320YYY. DINT-350 revision N supersedes DINT-350  
revision K.
- 5) Appendix B, dated November 2004, supersedes Appendix B, dated June 2003.
- 6) Table of Contents, page vi dated August 2005, supersedes Table of Contents, page vi, dated June  
2003. Section 5, page 5-9 dated August 2005, supersedes Section 5, page 5-9, dated June 2003.  
Appendix A, added DBM120 series motors. Appendix B, added cables for the DBM120 series  
motors.
- 7) Section 5, page 5-9, dated March 2006, supersedes Section 5, page 5-9, dated August 2005.
- 8) Appendix B, DINT-300 drawing, Revision M, supersedes Appendix B, DINT-300, Revision L.

**INDUSTRIAL INDEXING SYSTEMS, Inc.**

Tel: (585) 924-9181

626 Fishers Run  
Victor, New York 14564

Fax: (585) 924-2169

## TABLE OF CONTENTS

List of Illustration ..... ix

Introduction ..... xi

### SECTION 1 - OVERVIEW

1.1 Identifying Delta Packages ..... 1 - 1

1.2 Identifying Delta Drives ..... 1 - 2

1.3 Identifying Delta Motors ..... 1 - 2

### SECTION 2 - SPECIFICATIONS

2.1 Driver Specifications ..... 2 - 1

2.1.1 Motor Output ..... 2 - 1

2.1.2 Power Supply ..... 2 - 2

2.1.3 Control Performance ..... 2 - 3

2.1.4 Environment ..... 2 - 3

2.1.5 I/O Control Signals ..... 2 - 4

2.1.6 Analog I/O Signals ..... 2 - 4

2.1.7 High Speed Digital I/O Signals ..... 2 - 4

2.1.8 Protection ..... 2 - 4

2.2 Motor Specifications ..... 2 - 5

2.2.1 General ..... 2 - 5

2.2.2 Feedback Device ..... 2 - 5

2.2.3 Other ..... 2 - 5

### SECTION 3 - PROGRAMMING THE DELTA DRIVER

3.1 Navigating the Driver's Menu ..... 3 - 2

3.1.1 Status Display Menu Loop ..... 3 - 4

3.1.2 Diagnostic Display Menu Loop ..... 3 - 6

3.1.3 Adjustment Parameter Menu Loop ..... 3 - 9

3.1.4 User Parameter Menu Loop ..... 3 - 10

3.1.5 HP Parameter Menu Loop ..... 3 - 12

3.2 Writing New Values in Read/Write Parameters ..... 3 - 13

3.3 Navigating the Special Function Menu Loop ..... 3 - 14

3.3.1 Manual Jog Operation ..... 3 - 14

3.3.2 Output Forcing Function ..... 3 - 15

3.3.3 Auto Tuning ..... 3 - 15

3.3.4 Link Axis Number ..... 3 - 15

3.3.5 Service Data Monitor ..... 3 - 15

## SECTION 4 - DRIVER OPERATION MODES

4.1	Speed Control Mode 1 .....	4 - 1
4.1.1	Signal Wiring.....	4 - 2
4.1.2	Speed Control Input/Output .....	4 - 3
4.1.3	Speed Control Parameter Setup.....	4 - 5
4.1.3.1	Speed Control Adjustment Parameters.....	4 - 5
4.1.3.2	Speed Control User Parameters.....	4 - 7
4.1.3.3	Speed Control Setup Parameters.....	4 - 12
4.2	Torque Control Mode 2.....	4 - 13
4.2.1	Signal Wiring.....	4 - 14
4.2.2	Torque Control Input/Output .....	4 - 15
4.2.3	Torque Control Parameter Setup.....	4 - 17
4.2.3.1	Torque Control Adjustment Parameters.....	4 - 17
4.2.3.2	Torque Control User Parameters.....	4 - 18
4.2.3.3	Torque Control Setup Parameters.....	4 - 23
4.3	Pulse Position Control Mode 3 .....	4 - 24
4.3.1	Signal Wiring.....	4 - 25
4.3.2	Pulse Position Control Input/Output.....	4 - 26
4.3.3	Pulse Position Control Parameter Setup.....	4 - 28
4.3.3.1	Pulse Position Control Adjustment Parameters .....	4 - 28
4.3.3.2	Pulse Position Control User Parameters .....	4 - 29
4.3.3.3	Pulse Position Control Setup Parameters .....	4 - 35
4.4	Speed/Torque/Position Control Mode 4 .....	4 - 36
4.4.1	Signal Wiring.....	4 - 37
4.4.2	Speed/Torque/Position Control Input/Output .....	4 - 38
4.4.3	Speed/Torque/Position Control Parameter Setup.....	4 - 41
4.4.3.1	Speed/Torque/Position Control Adjustment Parameters .....	4 - 41
4.4.3.2	Speed/Torque/Position Control User Parameters.....	4 - 43
4.4.3.3	Speed/Torque/Position Control Setup Parameters.....	4 - 48
4.5	Speed Preset Control Mode 5.....	4 - 50
4.5.1	Signal Wiring.....	4 - 51
4.5.2	Speed Preset Control Input/Output.....	4 - 52
4.5.3	Speed Preset Control Parameter Setup .....	4 - 54
4.5.3.1	Speed Preset Control Adjustment Parameters .....	4 - 54
4.5.3.2	Speed Preset Control User Parameters.....	4 - 56
4.5.3.3	Speed Preset Control Setup Parameters .....	4 - 61
4.6	Electronic Gearing Control Mode 6.....	4 - 63
4.6.1	Signal Wiring.....	4 - 64
4.6.2	Electronic Gearing Control Input/Output.....	4 - 65
4.6.3	Electronic Gearing Control Parameter Setup.....	4 - 66
4.6.3.1	Electronic Gearing Control Adjustment Parameters .....	4 - 66
4.6.3.2	Electronic Gearing Control User Parameters.....	4 - 67
4.6.3.3	Electronic Gearing Control Setup Parameters .....	4 - 73

## **SECTION 5 - POWER WIRING**

5.1	Circuit Breaker.....	5 - 1
5.2	Contactor.....	5 - 1
5.3	Wire Sizes.....	5 - 1
5.4	Transformers.....	5 - 2
5.5	Branch Circuit Protection for Control Voltage R0, S0.....	5 - 3
5.6	Wiring Practices and Grounding.....	5 - 4
5.7	Power Sequencing.....	5 - 4

## **SECTION 6 - DRIVER TUNING**

6.1	Auto Tuning Sequence.....	6 - 1
6.1.1	Special Function Menu Loop.....	6 - 2
6.1.2	Auto Tuning Setup Parameters.....	6 - 2
6.1.3	Initiate Auto Tuning.....	6 - 3
6.2	Manual Tuning Procedure.....	6 - 3
6.3	Notch Filter Adjustment.....	6 - 4

## **SECTION 7 - REGEN RESISTOR SELECTION**

7.1	Driver Regeneration Capacities.....	7 - 1
7.2	Selection of Regeneration Resistor.....	7 - 2
7.3	Standard Regeneration Resistor Packages.....	7 - 6

## **SECTION 8 - DYNAMIC BRAKES**

## **SECTION 9 - MECHANICAL BRAKES**

9.1	No Mechanical Braking.....	9 - 1
9.2	Mechanical Braking With Hard Decel.....	9 - 1
9.3	Mechanical Braking With Soft Decel.....	9 - 1
9.4	Mechanical Brake Power Supply.....	9 - 6

## **SECTION 10 - ALARM CODES**

## **SECTION 11 - CONNECTING A DELTA DRIVER TO AN EXTERNAL POSITIONING CONTROLLER**

## **SECTION 12 - EMC INSTALLATION GUIDELINES FOR DELTA SERIES MOTORS AND DRIVERS**

12.1	Introduction to EMC Guidelines.....	12 - 1
12.2	EMC Requirements.....	12 - 1
12.3	Control Enclosure.....	12 - 1
12.4	Enclosure Mounting Panel.....	12 - 2
12.5	Power Line Filter .....	12 - 3
12.6	Driver Output (Motor Armature) Filter.....	12 - 4
12.7	Shielded Motor Cable .....	12 - 5
12.8	Regeneration Resistor Wiring (Option) .....	12 - 7
12.9	Digital Control Signals.....	12 - 8

## **SECTION 13 - APPLICATION NOTES**

13.1	Speed Torque Curves.....	13 - 1
13.2	Pulse Input & Output.....	13 - 2
13.2.1	Pulse Inputs FMA & FMB.....	13 - 2
13.2.2	Pulse Outputs APD, BPD & ZPD.....	13 - 4
13.2.3	Setting the Resolution of the Pulse Inputs and Outputs .....	13 - 5

## **APPENDIX A - MOTOR/DRIVER SPECIFICATIONS**

A.1	Motors with Resolvers.....	A - 1
A.2	Motors with Mechanical Brakes.....	A - 3
A.3	Motors with Encoders .....	A - 4
A.4	Motor/Driver Speed Torque Curves .....	A - 5
A.5	Driver Mounting and Dimensions .....	A - 98
A.6	Resolver Motor Dimensions .....	A - 123
A.7	Brake Motor Dimensions .....	A - 174
A.8	Encoder Motor Dimensions .....	A - 199

**APPENDIX B - CABLES AND ACCESSORIES**

B.1 Cable Part Numbers For Motors with Resolvers ..... B - 1

B.2 Cable Part Numbers For Motors with Mechanical Brakes..... B - 3

B.3 Cable Part Numbers For Motors with Encoders ..... B - 4

B.4 Accessories ..... B - 5



## LIST OF ILLUSTRATIONS

### SECTION 1 - OVERVIEW

### SECTION 2 - DRIVER SPECIFICATIONS

Figure 2.1	Delta Overload Protection Characteristic .....	2 - 6
Figure 2.2	Standard Resolver Wiring Connections for DBM-XXX/15R, DBM-500/30R and Larger.....	2 - 7
Figure 2.3	Alternate Resolver Wiring Connections for DBM-XXX/15R, DBM-500/30R and Larger.....	2 - 7
Figure 2.4	Standard Resolver Wiring Connections for DBM-120/30R, DBM-200/30R, DBM-400/30R, DBM-BXXX/30R, DBM-D30/30R and DBM-D50/30R.....	2 - 8
Figure 2.5	Alternate Resolver Wiring Connections for DBM-120/30R, DBM-200/30R and DBM-400/30R.....	2 - 8
Figure 2.6	Standard Resolver Wiring Connections for DBM-D100/30R Through DBM-D800/30R .....	2 - 9

### SECTION 3 - PROGRAMMING THE DELTA DRIVER

Figure 3.1	Delta Driver Keypad and Display.....	3 - 1
Figure 3.2	Main Menu Loop and Minor Loops .....	3 - 3

### SECTION 4 - DRIVER OPERATION MODES

### SECTION 5 - POWER WIRING

Figure 5.1	Grounding Technique.....	5 - 4
Figure 5.2	Power and Control Signals for DSD-1.5 Through DSD-17.5 Drivers .....	5 - 5
Figure 5.3	Power and Control Signals for DSD-35 Through DSD-115 Drivers .....	5 - 6
Figure 5.4	DSD-1.5/RB Through DSD-8.5/RB Power Wiring.....	5 - 7
Figure 5.5	DSD-1.5/RA Through DSD-17.5/RA Power Wiring.....	5 - 8
Figure 5.6	DSD-35/RA Through DSD-115/RA Power Wiring.....	5 - 9

### SECTION 6 - DRIVER TUNING

### SECTION 7 - REGEN RESISTOR SELECTION

Figure 7.1	Time .....	7 - 2
Figure 7.2	Connection of an External Regen Resistor for Driver Sizes DSD-1.5 Through DSD-17.5 .....	7 - 4
Figure 7.3	Connection of an External Regen Resistor for Driver Sizes DSD-35 and Larger.....	7 - 5
Table 7.1	Energy Absorption Capabilities.....	7 - 1
Table 7.2	External Resistor Specifications .....	7 - 3

## **SECTION 8 - DYNAMIC BRAKES**

Figure 8.1	Dynamic Brake Connection for the DSD-1.5 Through DSD-17.5 Drivers.....	8 - 2
Figure 8.2	Dynamic Brake Connection for the DSD-35 Through DSD-115 Drivers.....	8 - 3
Figure 8.3	Dynamic Braking Control Signals .....	8 - 4

## **SECTION 9 - MECHANICAL BRAKES**

Figure 9.1	Mechanical Brake Connection for the DSD-1.5 Through DSD-17.5 Drivers.....	9 - 2
Figure 9.2	Mechanical Brake Connection for the DSD-35 Through DSD-115 Drivers.....	9 - 3
Figure 9.3	Mechanical Brake Sequencing for Hard Decel .....	9 - 4
Figure 9.4	Mechanical Brake Sequencing for Soft Decel.....	9 - 5

## **SECTION 10 - ALARM CODES**

## **SECTION 11 - CONNECTING A DELTA DRIVER TO AN EXTERNAL POSITIONING CONTROLLER**

## **SECTION 12 - EMC INSTALLATION GUIDELINES FOR DELTA SERIES MOTORS AND DRIVERS**

Figure 12.1	Enclosure Mounting Panel .....	12 - 2
Figure 12.2	Power Line Filter.....	12 - 3
Figure 12.3	Driver Output (Motor Armature) Filter .....	12 - 4
Figure 12.4	Grounding Motor Armature Cable.....	12 - 5
Figure 12.5	Grounding Motor Armature Cable.....	12 - 5
Figure 12.6	Alternate Method to Ground the Motor Armature Cable .....	12 - 6
Figure 12.7	Alternate Method to Ground the Motor Armature Cable .....	12 - 6
Figure 12.8	SKINTOP Ground Fittings.....	12 - 7
Figure 12.9	Saddle Clamp Method of Grounding .....	12 - 7

## **SECTION 13 - APPLICATION NOTES**

## **APPENDIX A - MOTOR/DRIVER SPECIFICATIONS**

## **APPENDIX B - CABLES AND ACCESSORIES**