

IB-19B007

DELTA SERIES

JULY 2003

DELTA S



INSTRUCTION BOOK

INDUSTRIAL INDEXING SYSTEMS, Inc.

Revision - A
Approved By:

Proprietary information of Industrial Indexing Systems, Inc. furnished for customer use only.
No other uses are authorized without the prior written permission of
Industrial Indexing Systems, Inc.

ER-6035**ERRATA SHEET, IB-19B007 REV. A****AUGUST 2006**

Date	Rev.	ECN No.	DR	CHK	CHK
9/3/03	0	ECN-03-392 (See Note 1)	KY	CD	
10/28/03	A	ECN-03-438, 03-446 (See Note 2)	KY	CM	
03/25/04	B	ECN-04-033 (See Note 3)	KY	CD	
06/04/04	C	ECN-04-216 (See Note 4)	KY	ELS/MH	
11/24/04	D	ECN-03-267, 03-358, 03-462 ECN-04-137, 04-198, 04-220, 04-290, 04-404 (See Note 5)	KY	KY	
9/23/05	E	ECN-05-260 (See Note 6)	KY	KY	
3/9/06	F	ECN-06-007 (See Note 7)	KY	KY	
8/9/06	G	ECN-06-181 (See Note 8)	KY	KY	

Notes:

- 1) Appendix A, page A-4, dated September 2003, supersedes Appendix A, page A-4, dated June 2003.
- 2) Section 4, page 4-11, dated October 2003, supersedes Section 4, page 4-11, dated July 2003. Appendix B, page B-2, dated October 2003, supersedes Appendix B, page B-2, dated June 2003.
- 3) Section 6, page 6-6, dated March 2004, supersedes Section 6, page 6-6, dated July 2003. Section 10, page 10-3, dated March 2004, supersedes Section 10, page 10-3, dated June 2003.
- 4) Section 6, page 6-6, dated June 2004, supersedes Section 6, page 6-6, dated March 2004. Appendix B, pages B-4 and B-5, dated June 2004, supersedes Appendix B, pages B-4 and B-5, dated June 2003. C-329YYY supersedes C-320YYY. DINT-350 revision N supersedes DINT-350 revision K.
- 5) Appendix B, dated November 2004, supersedes Appendix B, dated June 2003.
- 6) Table of Contents, page vi, dated August 2005, supersedes Table of Contents, page vi, dated June 2003. Section 6, page 6-6 dated August 2005, supersedes Section 6, page 6-6, dated June 2004. Appendix A, added DBM120 series motors. Appendix B, added cables for the DBM120 series motors.
- 7) Section 6, page 6-6, dated March 2006, supersedes Section 6, page 6-6, dated August 2005.
- 8) Appendix B, DINT-300 drawing, Revision M, supersedes Appendix B, DINT-300, Revision L.

INDUSTRIAL INDEXING SYSTEMS, Inc.

626 Fishers Run

Victor, New York 14564

Tel: (585) 924-9181

Fax: (585) 924-2169

Proprietary information of Industrial Indexing Systems, Inc. furnished for customer use only. No other uses are authorized without the prior written permission of
Industrial Indexing Systems, Inc.

TABLE OF CONTENTS

List of Illustration ix

Introduction xi

SECTION 1 - OVERVIEW

1.1 Identifying Delta S Packages 1 - 1
1.2 Identifying Delta S Drives 1 - 2
1.3 Identifying Delta Motors 1 - 3

SECTION 2 - DESCRIPTION

2.1 Components 2 - 2
2.1.1 Status Indicators 2 - 2
2.1.2 Connectors 2 - 2

SECTION 3 - SPECIFICATIONS

3.1 Driver Specifications 3 - 1
3.1.1 Motor Output 3 - 1
3.1.2 Power Supply 3 - 2
3.1.3 Control Performance 3 - 3
3.1.4 Environment 3 - 3
3.1.5 Sercos Interface 3 - 3
3.1.6 Standard Digital Inputs/Outputs 3 - 4
3.1.7 Optional Digital Inputs/Outputs Expansion Board 3 - 4
3.1.7.1 Sourcing I/O Option "J" 3 - 4
3.1.7.2 Sinking I/O Option "K" 3 - 4
3.1.8 Probe Inputs 3 - 4
3.1.9 Analog I/O Signals 3 - 4
3.1.10 High Speed Digital I/O Signals 3 - 5
3.1.11 Protection 3 - 5
3.2 Motor Specifications 3 - 5
3.2.1 General 3 - 5
3.2.2 Feedback Device 3 - 5
3.2.3 Other 3 - 5

SECTION 4 - KEYPAD PROGRAMMING

4.1	Navigating the Driver's Menu.....	4 - 2
4.1.1	Status Display Menu Loop	4 - 4
4.1.2	Diagnostic Display Menu Loop	4 - 6
4.1.3	Adjustment Parameter Menu Loop	4 - 8
4.1.4	User Parameter Menu Loop.....	4 - 11
4.1.5	HP Parameter Menu Loop	4 - 15
4.2	Writing New Values in Read/Write Parameters	4 - 18
4.3	Navigating the Special Function Menu Loop	4 - 18
4.3.1	Manual Jog Operation	4 - 19
4.3.2	Output Forcing Function.....	4 - 19
4.3.3	Auto Tuning	4 - 19
4.3.4	Link Axis Number	4 - 19
4.3.5	Service Data Monitor	4 - 19

SECTION 5 - SERCOS PROGRAMMING

5.1	Sercos Setup.....	5 - 1
5.2	Identification Numbers	5 - 1
5.2.1	IDN List.....	5 - 1
5.2.2	IDN By Function	5 - 5
5.2.3	IDN Description - Sercos Specific.....	5 - 9
5.2.4	IDN Description - IIS Specific.....	5 - 39

SECTION 6 - POWER WIRING

6.1	Circuit Breaker.....	6 - 1
6.2	Contactors	6 - 1
6.3	Wire Sizes	6 - 1
6.4	Transformers	6 - 2
6.5	Branch Circuit Protection for Control Voltage R0, S0	6 - 3
6.6	Wiring Practices and Grounding.....	6 - 3
6.7	Power Wiring Diagrams	6 - 4

SECTION 7 - I/O SIGNAL WIRING

7.1	Delta S Driver With Standard I/O Interfacing to a DINT-300	7 - 1
7.1.1	Pin Description	7 - 2
7.2	Delta S Driver With Interfacing to a DINT-300S.....	7 - 3
7.2.1	Pin Description	7 - 4
7.3	Delta S Driver With Interfacing to a DINT-300K.....	7 - 5
7.3.1	Pin Description	7 - 6
7.4	Delta S Optional I/O Board J (Sourcing)	7 - 7
7.4.1	“J” Option Sourcing I/O.....	7 - 7
7.5	Delta S Optional I/O Board K (Sinking)	7 - 8
7.5.1	“K” Option Sinking I/O	7 - 8

SECTION 8 - DRIVER TUNING

8.1	Auto Tuning Sequence	8 - 1
8.1.1	Special Function Menu Loop	8 - 2
8.1.2	Auto Tuning Setup Parameters.....	8 - 2
8.1.3	Initiate Auto Tuning.....	8 - 3
8.2	Manual Tuning Procedure	8 - 3
8.3	Notch Filter Adjustment.....	8 - 4

SECTION 9 - REGEN RESISTOR SELECTION

9.1	Driver Regeneration Capacities.....	9 - 1
9.2	Selection of Regeneration Resistor.....	9 - 1
9.3	Standard Regeneration Resistor Packages.....	9 - 6

SECTION 10 - DYNAMIC BRAKES

SECTION 11 - MECHANICAL BRAKES

11.1	No Mechanical Braking.....	11 - 1
11.2	Mechanical Braking.....	11 - 1
11.3	Mechanical Brake Power Supply.....	11 - 4

SECTION 12 - ALARM CODES / STATUS

SECTION 13 - EMC INSTALLATION GUIDELINES FOR DELTA S SERIES MOTORS AND DRIVERS

13.1	Introduction to EMC Guidelines.....	13 - 1
13.2	EMC Requirements.....	13 - 1
13.3	Control Enclosure.....	13 - 1
13.4	Enclosure Mounting Panel.....	13 - 2
13.5	Power Line Filter	13 - 3
13.6	Driver Output (Motor Armature) Filter.....	13 - 4
13.7	Shielded Motor Cable	13 - 5
13.8	Regeneration Resistor Wiring (Option)	13 - 7
13.9	Digital Control Signals.....	13 - 8

SECTION 14 - APPLICATION NOTES

14.1	Speed Torque Curves.....	14 - 1
14.2	Pulse Input & Output.....	14 - 2
14.2.1	Auxiliary Encoder Pulse Inputs FMA & FMB	14 - 2
14.2.2	Pulse Outputs APD, BPD & ZPD.....	14 - 4
14.2.3	Setting the Resolution of the Pulse Outputs.....	14 - 5

APPENDIX A - MOTOR/DRIVER SPECIFICATIONS

A.1	Motors with Resolvers.....	A - 1
A.2	Motors with Mechanical Brakes.....	A - 3
A.3	Motors with Encoders	A - 4
A.4	Motor/Driver Speed Torque Curves	A - 5
A.5	Driver Mounting and Dimensions	A - 98
A.6	Resolver Motor Dimensions	A - 123
A.7	Brake Motor Dimensions	A - 174
A.8	Encoder Motor Dimensions	A - 199

APPENDIX B - CABLES AND ACCESSORIES

B.1 Cable Part Numbers For Motors with Resolvers B - 1

B.2 Cable Part Numbers For Motors with Mechanical Brakes..... B - 3

B.3 Cable Part Numbers For Motors with Encoders B - 4

B.4 Accessories B - 5

LIST OF ILLUSTRATIONS

SECTION 1 - OVERVIEW

SECTION 2 - DESCRIPTION

Figure 2.1	Delta S Layout	2 - 1
------------	----------------------	-------

SECTION 3 - SPECIFICATIONS

Figure 3.1	Delta S Overload Protection Characteristic	3 - 6
Figure 3.2	Standard Resolver Wiring Connections for DBM-XXX/15R and DBM-500/30R and Larger	3 - 7
Figure 3.3	Alternate Resolver Wiring Connections for DBM-XXX/15R and DBM-500/30R and Larger	3 - 7
Figure 3.4	Standard Resolver Wiring Connections for DBM-120/30R, DBM-200/30R, DBM-400/30R, DBM-BXXX/30R, DBM-D30/30R and DBM-D50/30R	3 - 8
Figure 3.5	Alternate Resolver Wiring Connections for DBM-120/30R, DBM-200/30R and DBM-400/30R	3 - 8
Figure 3.6	Standard Resolver Wiring Connections for DBM-D100/30R Through DBM-D800/30R	3 - 9

SECTION 4 - KEYPAD PROGRAMMING

Figure 4.1	Delta S Driver Keypad and Display	4 - 1
Figure 4.2	Main Menu Loop and Minor Loops	4 - 3

SECTION 5 - SERCOS PROGRAMMING

Figure 5.1	Velocity Polarity Parameter	5 - 17
Figure 5.2	Position Polarity Parameter	5 - 19
Figure 5.3	Torque Polarity Parameter	5 - 22
Figure 5.3	Example of Velocity Window	5 - 31

SECTION 6 - POWER WIRING

Figure 6.1	Grounding Technique	6 - 3
Figure 6.2	DS-1.5/RB Through DS-8.5/RB Power Wiring	6 - 4
Figure 6.3	DS-1.5/RA Through DS-17.5/RA Power Wiring	6 - 5
Figure 6.4	DS-35/RA Through DS-115/RA Power Wiring	6 - 6

SECTION 7 - I/O SIGNAL WIRING

Figure 7.1	I/O Connections to a DINT-300	7 - 1
Figure 7.2	I/O Connections to a DINT-300S	7 - 3
Figure 7.3	I/O Connections to a DINT-300K	7 - 4
Figure 7.4	I/O Connections For Optional J (Sourcing) Board	7 - 5
Figure 7.5	I/O Connections For Optional K (Sinking) Board	7 - 6

SECTION 8 - DRIVER TUNING

SECTION 9 - REGEN RESISTOR SELECTION

Figure 9.1	Time	9 - 2
Figure 9.2	Connection of an External Regen Resistor for Driver Sizes DS-1.5 Through DS-17.5.....	9 - 3
Figure 9.3	Connection of an External Regen Resistor for Driver Sizes DS-35 and Larger...	9 - 4
Table 9.1	Energy Absorption Capabilities	9 - 1
Table 9.2	External Resistor Specifications	9 - 3

SECTION 10 - DYNAMIC BRAKES

Figure 10.1	Dynamic Brake Connection for the DS-1.5 Through DS-17.5 Drivers	10 - 2
Figure 10.2	Dynamic Brake Connection for the DS-35 Through DS-115 Drivers	10 - 3

SECTION 11 - MECHANICAL BRAKES

Figure 11.1	Mechanical Brake Connection for the DS-1.5 Through DS-17.5 Drivers.....	11 - 2
Figure 11.2	Mechanical Brake Connection for the DS-35 Through DS-115 Drivers.....	11 - 3

SECTION 12 - ALARM CODES / STATUS

SECTION 13 - EMC INSTALLATION GUIDELINES FOR DELTA S SERIES MOTORS AND DRIVERS

Figure 13.1	Enclosure Mounting Panel	13 - 2
Figure 13.2	Power Line Filter.....	13 - 3
Figure 13.3	Driver Output (Motor Armature) Filter	13 - 4
Figure 13.4	Grounding Motor Armature Cable.....	13 - 5
Figure 13.5	Grounding Motor Armature Cable.....	13 - 5
Figure 13.6	Alternate Method to Ground the Motor Armature Cable	13 - 6
Figure 13.7	Alternate Method to Ground the Motor Armature Cable	13 - 6
Figure 13.8	SKINTOP Ground Fittings.....	13 - 7
Figure 13.9	Saddle Clamp Method of Grounding	13 - 7

SECTION 14 - APPLICATION NOTES

APPENDIX A - MOTOR/DRIVER SPECIFICATIONS

APPENDIX B - CABLES AND ACCESSORIES